


AC 164 STF/ 2 AC 164 BUF/ 2

Montageanleitung

Assembling instruction



AC 164 STF/ 2 **AC 164 BUF/ 2**
 AC 164 STF/ 2 AC 164 BUF/ 2

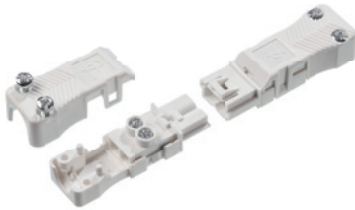

POSITIONIERUNG DER ZUGENTLASTUNGSBRÜCKEN

Positioning of the Strain Relief Bridges

0,5 - 1,5 mm ²	16 A 250/400 V	0,5 Nm	
-------------------------------------	--------------------------	---------------	--

2 POLE Ø 5,0 - 7,7 mm

POS. 01	X	3,0 X 5,0 Ø 5,0 - 6,2	X	Ø 6,3 - 7,2	≥ Ø 7,3


KABELDURCHMESSER ERMITTELN

Determining the cable diameter




KEINE ZEL-BRÜCKE

No ZEL insert

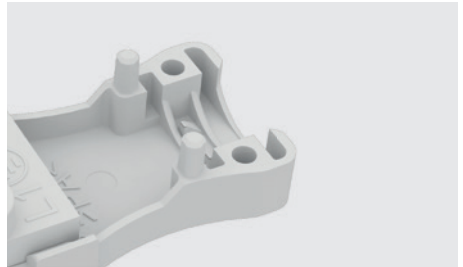

ZEL-BRÜCKE AN POS. 1

ZEL insert on pos. 1

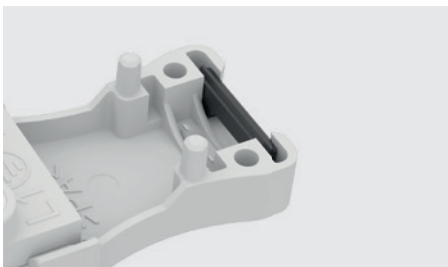

ZEL-BRÜCKE GEDREHT AN POS. 1

ZEL insert turned on pos. 1



01/2019 ZZACT1642